



P.O. Box 14397 \* Portland, OR 97293 \* Ph.503.253.7308 \* Fx.503.253.0721  
e-mail: [info@iwata-medea.com](mailto:info@iwata-medea.com) \* website: [www.iwata-medea.com](http://www.iwata-medea.com)

---

## Assembly Instructions

### Iwata Silver Jet Air Compressor Model IS-50

Congratulations on the purchase of the Iwata Silver Jet Air Compressor. This air compressor has been designed for user who needs quite, clean and pulse free air with precise adjustment of air pressure to the airbrush. Carefully follow the instructions in this owners manual before using the unit.

#### Features:

- Oil-less piston compressor
- Air Pressure Adjustor
- Air Pressure Gauge
- Airbrush Holder
- Power Switch
- Protective Metal Case
- Pistol Grip Filter



#### SETTING UP YOUR COMPRESSOR:

- a. Carefully unpack the compressor and all packaged components.  
Included in the box are the following items:
  - 1 ea. IS-50 compressor
  - 1 ea. Airbrush Airhose
  - 1 ea. Pistol Grip Filter
- b. Screw the Pistol Grip Filter onto the airbrush  
(finger tighten only)



- c. Screw the airhose onto the Pistol Grip Filter.  
(finger tighten only)



- d. Screw the airhose onto the compressor.



- e. Press down on the trigger before turning on the unit.



- f. Plug the unit into a grounded wall outlet.



Turn ON the unit by pressing the top side of the switch.

Adjust the air pressure by turning the air adjustment knob to the desired pressure.

- g. As the unit is being used, water may collect in the Pistol Grip Filter. Release the water by pushing up on the release valve with your finger and a paper towel.

